
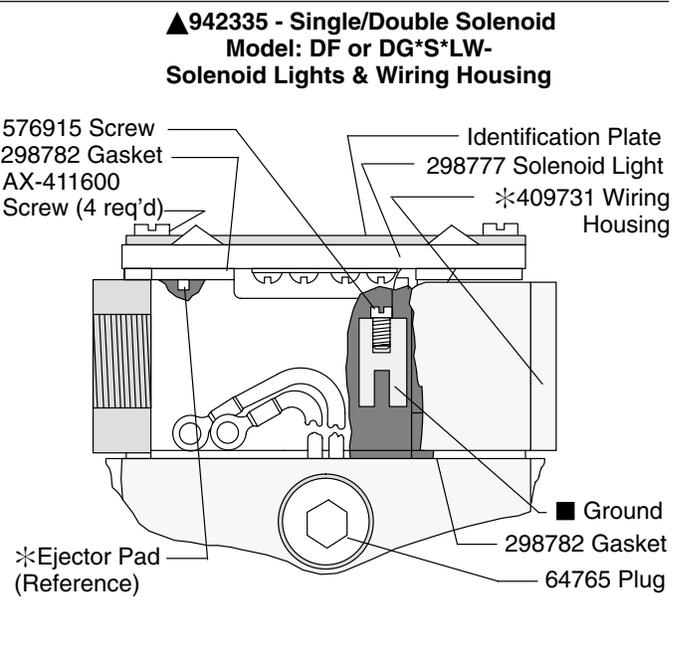
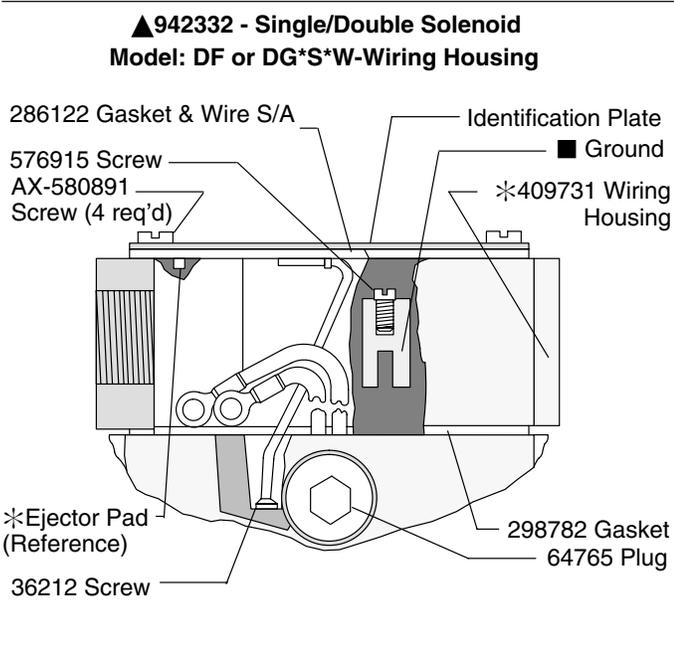
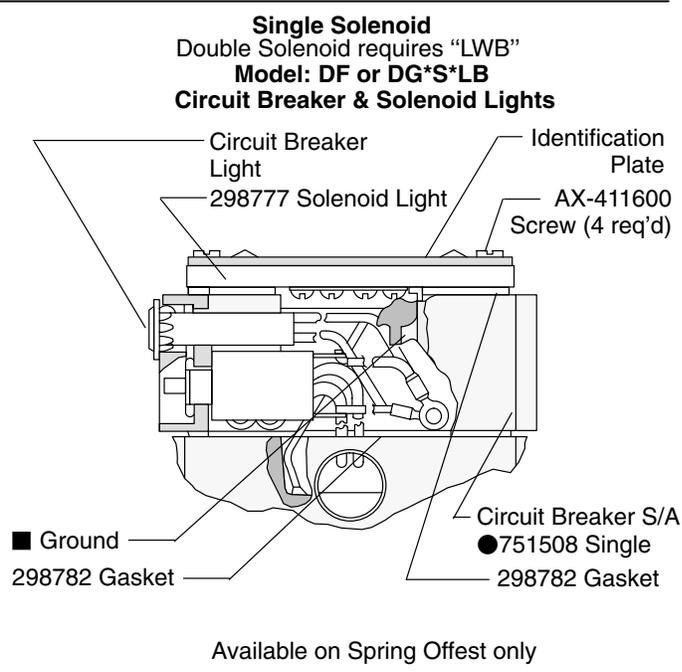


Directional Valves Electrical Accessories

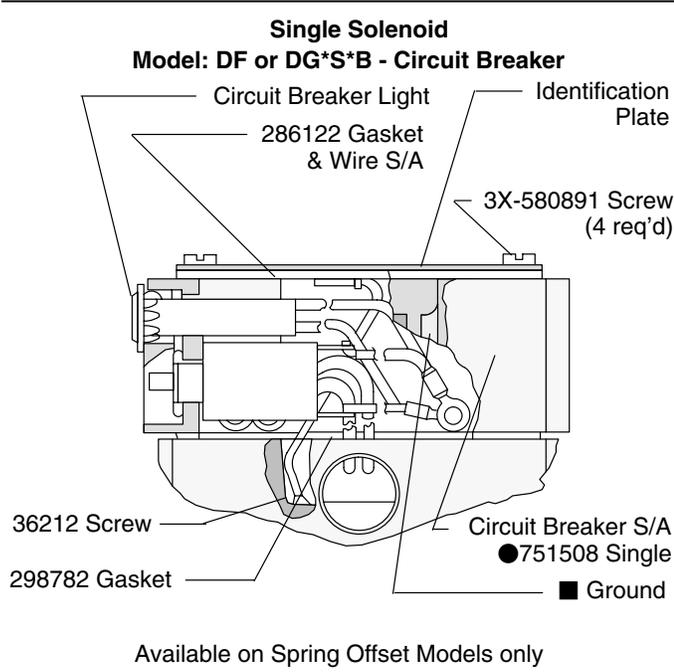

● Assemble with circuit breaker and light over solenoid.


Electrical circuit diagram is shown on underside of identification plate.

■ Ground provided for #8 self-tapping screw for customer convenience. The housings may be connected together and grounded on the DG-01 body.


▲ Service kits include all parts as shown.

Note
 Circuit breaker option is not available with wet armature solenoid valves.


**Single Solenoid/Double Solenoid
Model: DF or DG*S*B -
Wiring Housing & Circuit Breaker**

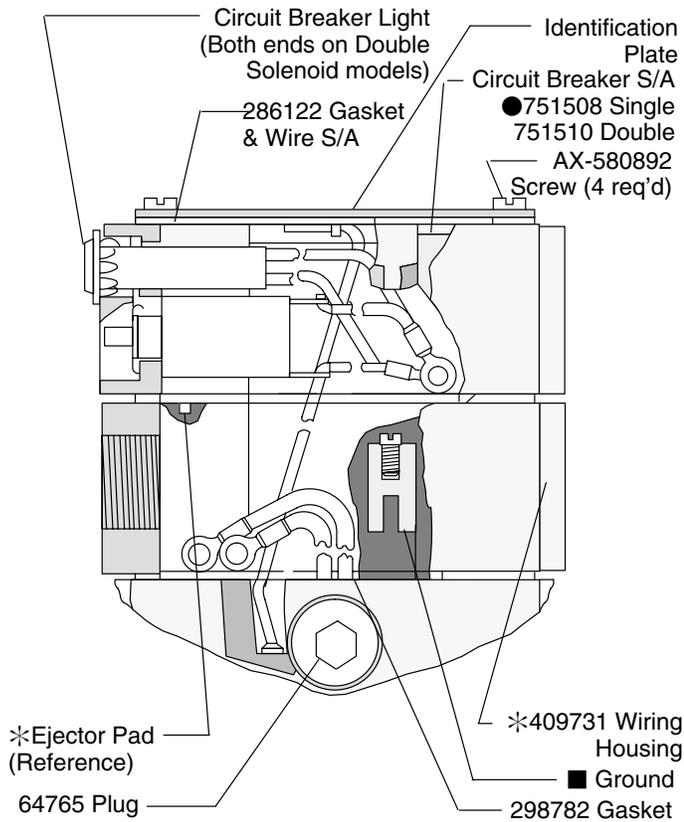


**Single Solenoid/Double Solenoid
Model: DF or DG*S*LWB - Solenoid Light
Wiring Housing & Circuit Breaker**

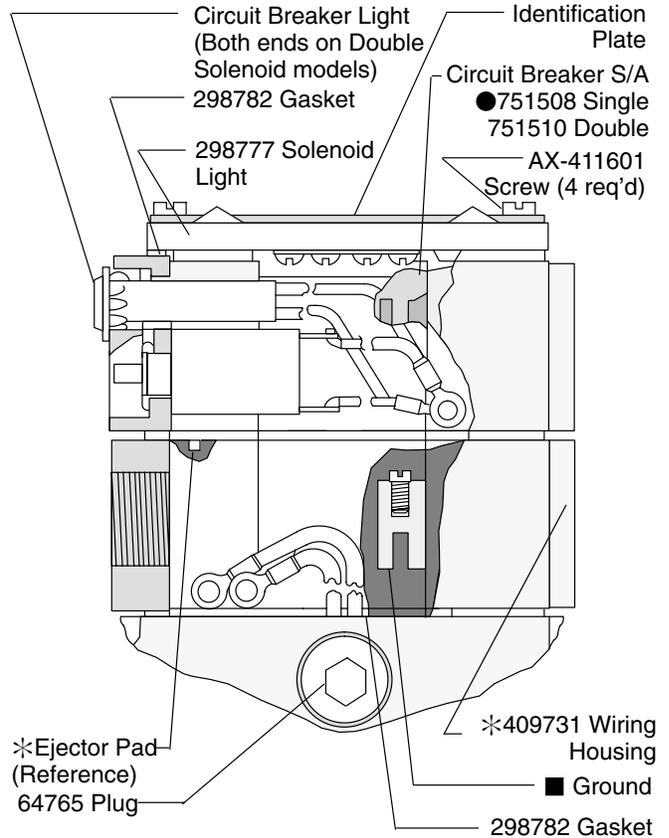

**Single/Double Solenoid
Model: DF or DG*S*WT-
Wiring Housing & Terminal Strip**

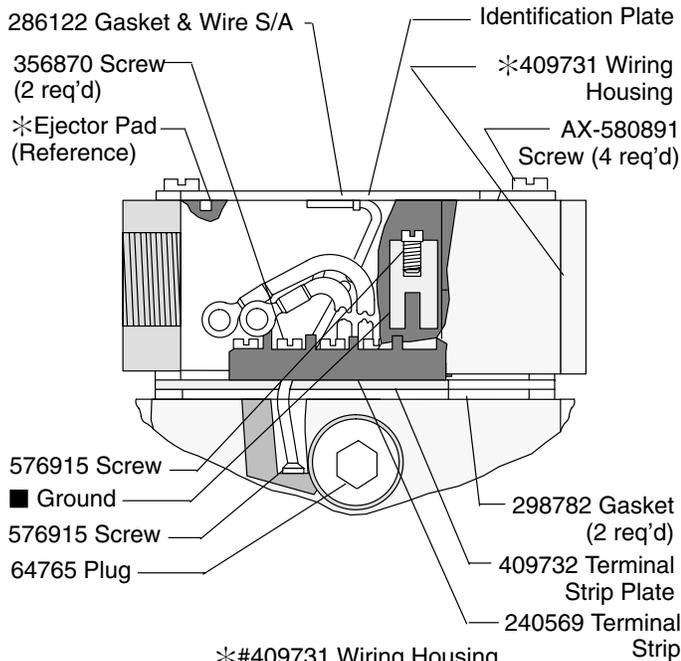

**Single/Double Solenoid
Model: DF or DG*S*WTB- Terminal Strip
Wiring Housing & Circuit Breaker**

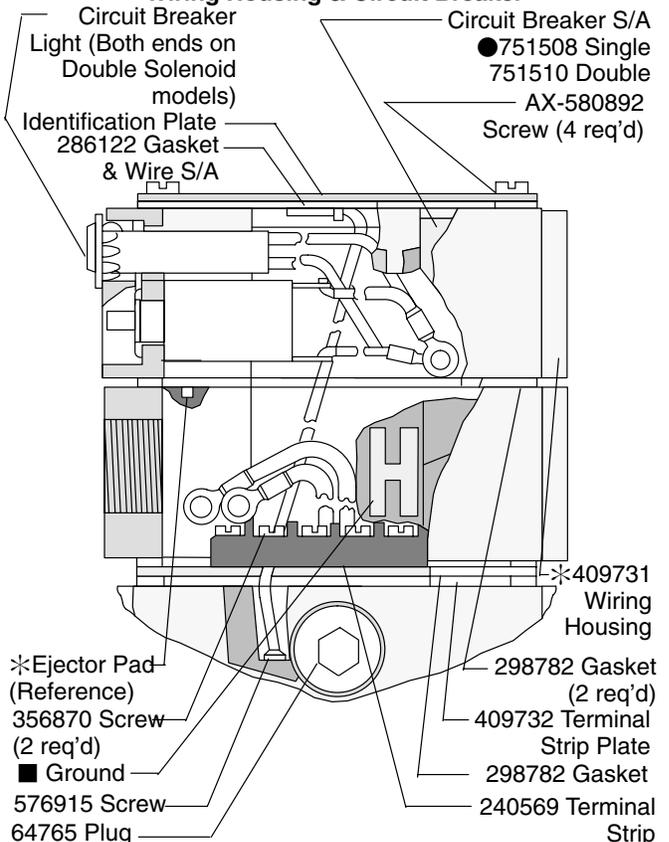

Assemble housing with ejector pads and with electrical conduit connection over solenoid "B". (Solenoids "A" and "B" are identified on units by diagram plate on side of pilot valve. For type "4" and "8" spools conduit connection location on end of "W" wiring housing is reversed).